

---

 
# CLEVERTOUCH GUIDE

---

Congratulations! Your new display has been installed. Now what do you do?


The display in front of you is not only an interactive display panel but also its own android computer. You may use this and its features or you may change the input and display what you would like from your computer or document camera.

To get to the different input options, press the menu button under power on the right hand side of the display to get a gear. This will pull up your display input options.

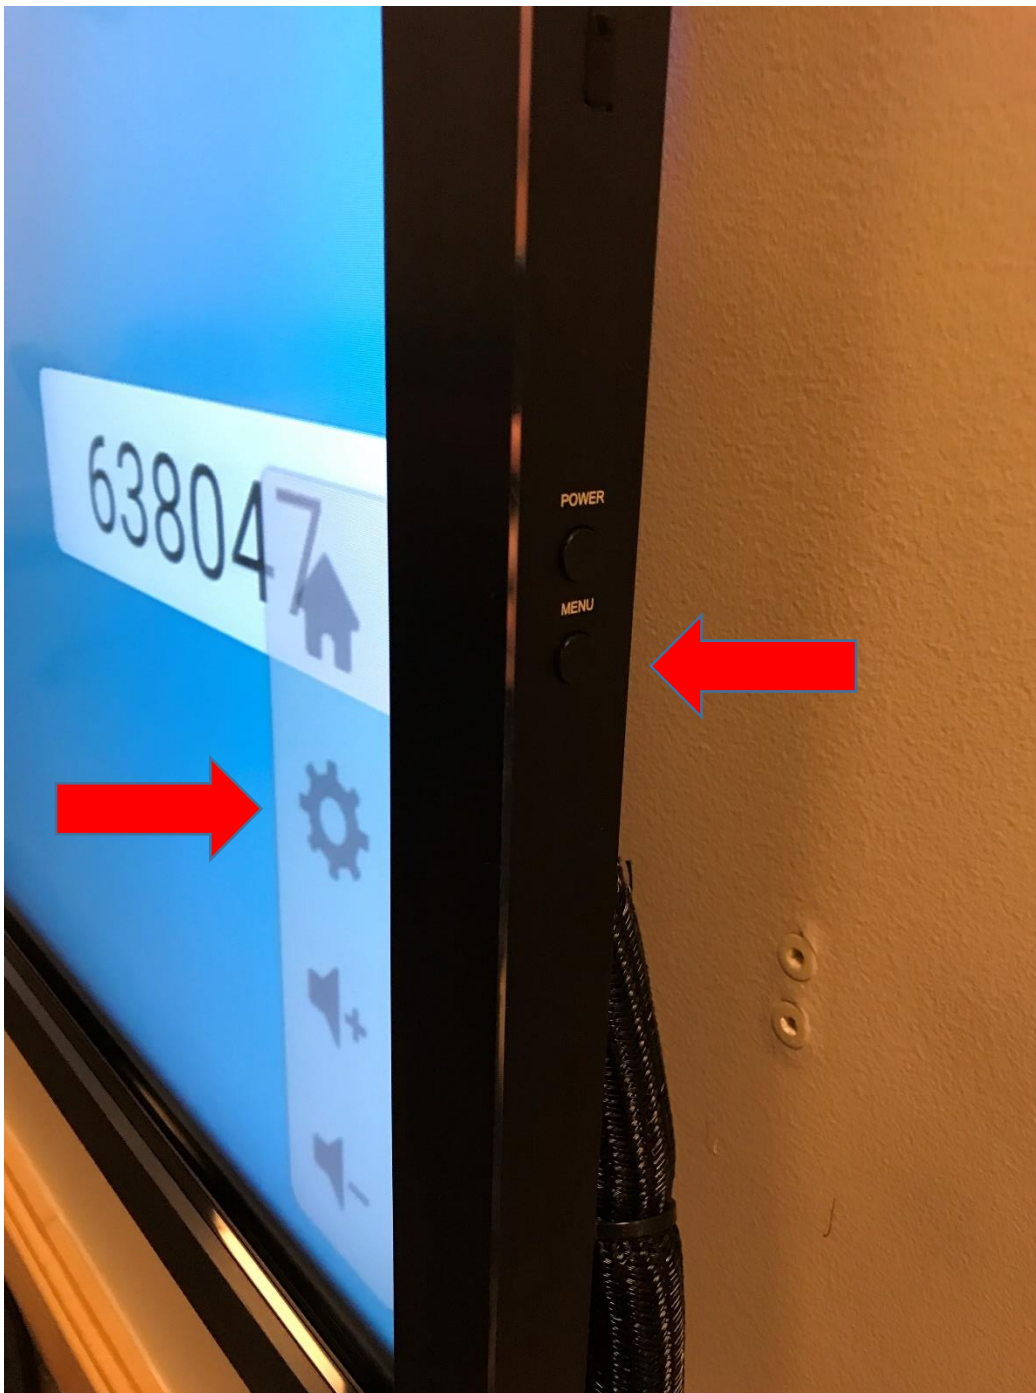

You can also try swiping up from the bottom of the display as well, but this can be tricky.

Once you have chosen the gear or swiped up, you should see this.

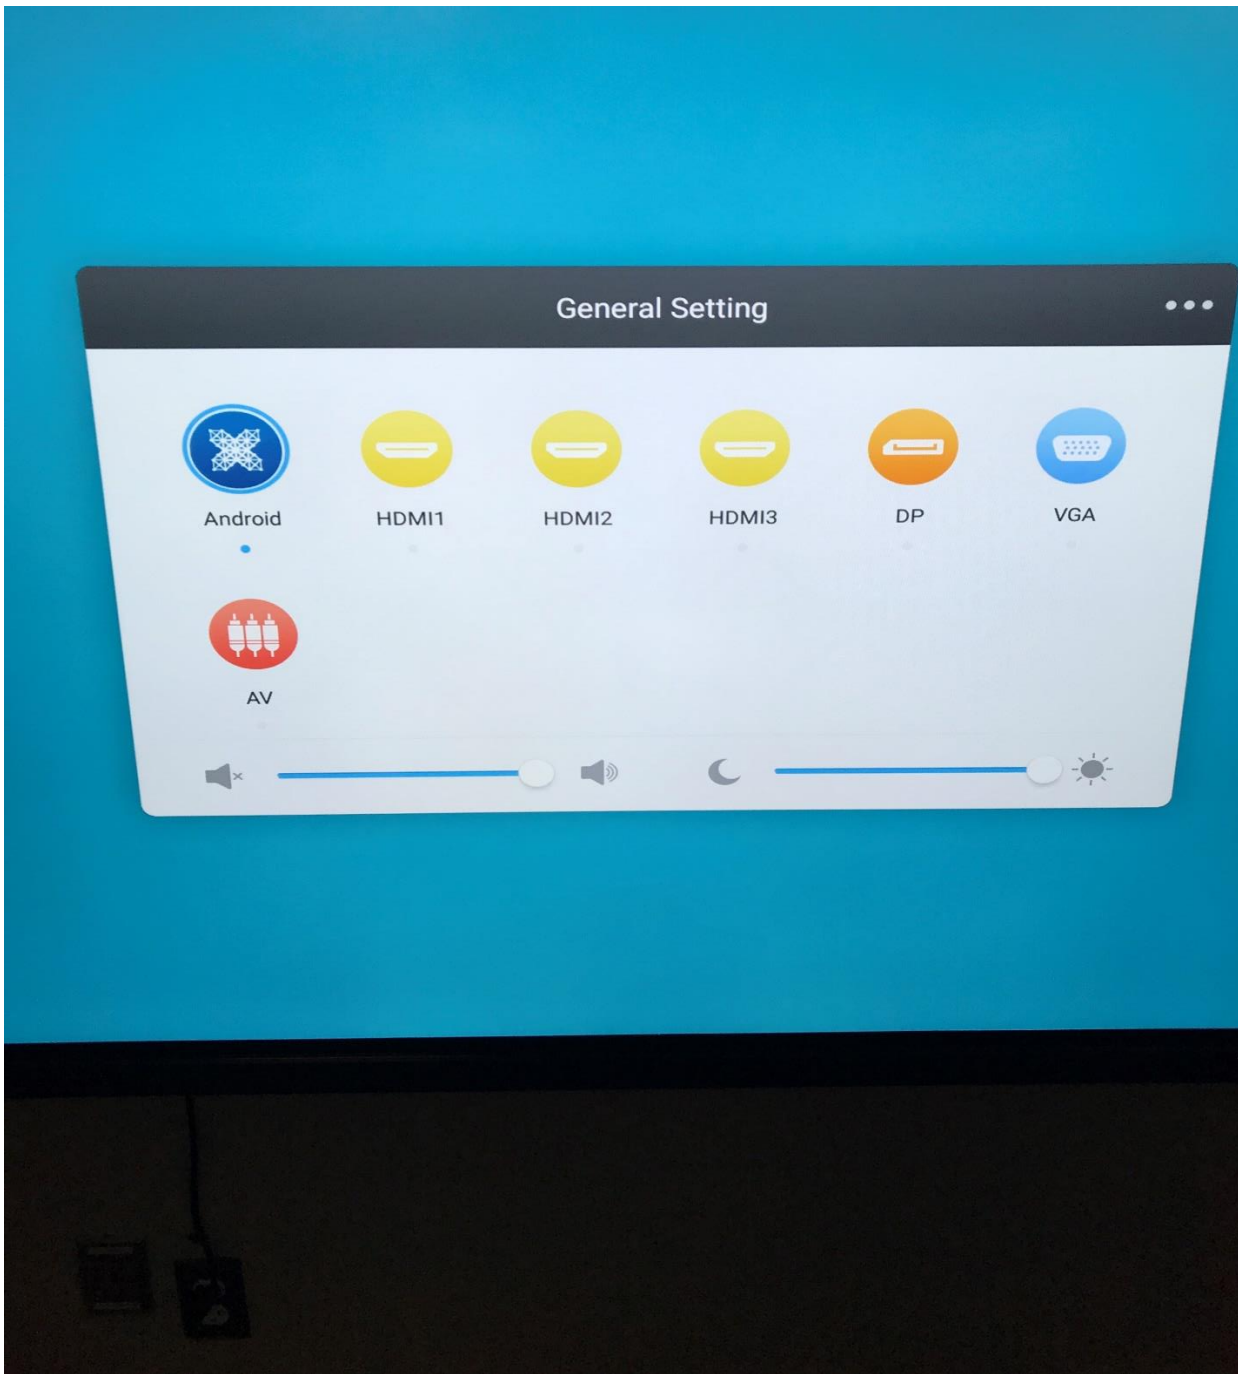


- Android is the Clevertouch Display itself. It is a stand-alone computer with apps and an interactive whiteboard.
- HDMI (1-3) will be your teacher computer. Choose the HDMI option with a blue dot underneath to display your teacher computer.
- The VGA option is for your document camera, if you have one.

---

# WHAT DO I DO WITH THIS REMOTE?!

---

There is possibly a box of extra cables, a remote, and “stuff” that will come with your Clevertouch display. You will want to keep this safe. The remote is the easiest way to FREEZE the display. All you have to do is push the blue button while aiming the remote at the bottom blue light on the right hand side of the display.

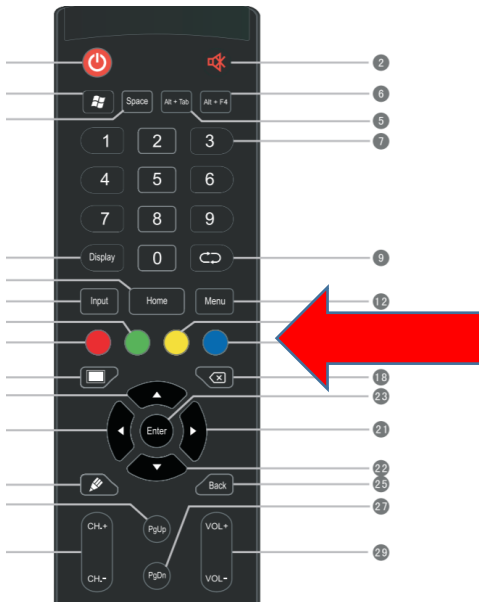

- |    |                  |  |
|----|------------------|--|
| 1  | ⏻ :              | Press this button to enter standby when power is on; Click this button to switch on in standby condition |
| 2  | 🔇 :              | Mute switch  |
| 3  | Ⓜ :              | Built-in computer Windows key  |
| 4  | Space :          | Built-in computer Space key  |
| 5  | Alt+Tab :        | Built-in computer spacebar Alt + Tab   |
| 6  | Alt+F4 :         | Built-in computer program window close button  |
| 7  | Numer i c keys : | TV digital channels input keys   |
| 8  | Display :        | Display channel information  |
| 9  | ↶ :              | TV channel return key  |
| 10 | Input :          | Input signal source selection key, choose different sourced according to need                            |
| 11 | Home :           | Android system main screen button  |
| 12 | Menu :           | TV OSD menu button, press this button to pop up TV's OSD menu  |
| 13 | Red :            | Button Lock, press quickly to lock bezel buttons, press again to unlock                                  |
| 14 | Green :          | TV channel function button   |
| 15 | Ye l l ow :      | TV channel function button   |
| 16 | Blue :           | Freeze, press quickly to freeze screen, press again to unfreeze screen                                   |
| 17 | ⬛ :              | One key for blank screen   |
| 18 | ⏪ :              | Backspace key  |
| 19 | ▲ :              | Direction key, press this button for upwards selection   |
| 20 | ◀ :              | Direction key, press this button for left selection  |
| 21 | ▶ :              | Direction key, press this button for right selection   |
| 22 | ▼ :              | Direction key, press this button for downwards selection   |
- 

The rest is just a quick rundown of the other remote buttons.

---

# HOW DO I CHANGE THE SPEAKERS?

---


You have the ability to switch the sound from coming out of the Clevertouch Display (which has a great set of speakers) to just your computer.

You may have a student that needs to make up an assignment or assessment that involves sound. You can have that student use your computer with headphones and have the sound come out solely from the computer.

On your PC in the bottom right hand corner you will see the sound icon.



Click on the sound icon and you will see which speakers you are currently using.

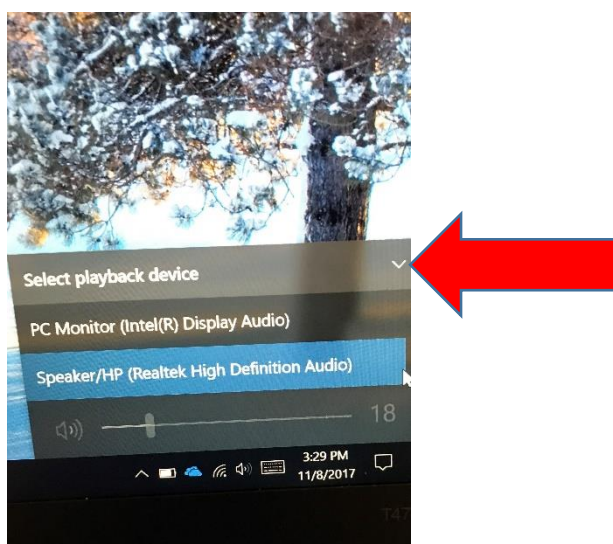

You can switch between speaker options by clicking on the carrot to the right of the current speaker selection.

The Realtek High Definition Audio are the speakers on your teacher computer.

The PC Monitor option is the Clevertouch. (I recommend these if you need the whole class to hear.)